



**Model ST-15CF**



Copyright © SunStar 2019

## **Owner's Manual**

**NOTE:** Read this manual carefully before you operate the machine. Properly keep this manual for any future reference



## NOTICES & ROUTINE MAINTENANCE

- 1) The unit cannot be re-started until after a half an hour on the leveled floor that it is moved to. The unit should be left to run for two (2) full hours before food is put into it for storage.
- 2) **DO NOT** switch on the unit within five (5) minutes after a sudden power failure.
- 3) The food should be stored with some spare space so as to allow for smooth air circulation.
- 4) The temperature of the food in the unit should not exceed the ambient temperature of the unit.
- 5) Acids, alkaline, corrosive substances, volatile, or inflammable materials cannot be stored in case of damage to the cabinet of the unit.
- 6) How to clean your SunStar unit:
  - a) Turn the control dial on the control panel located in the front of the unit (see figure four on page four) to the off position and then disconnect the power circuit.
  - b) Wipe down the interior walls with a soft cloth dipped in a neutral detergent.
  - c) Exhaust the condensed water or wipe it off with a dry clean cloth.
  - d) The outside of the unit can be cleaned with thin soda water or alcohol and then wiped clean with a damp cloth.
- 7) After the unit has been in use half a year, wipe off the dust that has accumulated on the condenser, fan, and compressor.

**SUNSTAR TECH SUPPORT: 260-214-0949**

**FAX: 260-499-4984**

# Table of Contents

**Dear Customer:** Please follow the user manual to achieve the best service performance and the longest service of life for your machine.


TOPIC	DESCRIPTION	PAGE NUMBER
1	Packing List	1
2	External Appearance	1
3	Major Technical Parameters	2
4	Transport & Storage	2
5	Startup and Temperature Regulations	3
6	Cable Requirements	4
7	Safety and Precautions	4
8	General Faults and Trouble-Shooting	5
9	Trouble-Shooting Form	6
10	Notices and Routine Maintenance	7
11	Contact Information	7

## PACKING LIST

The following should be included in your SunStar Unit Packaging. If something is missing, please contact the number at the back of this manual.

Item Number	Description	Quantity
1	Freezer	1
2	User Manual	1
3	Warranty Registration Card	1
4	Suspending Basket	2

## EXTERNAL APPEARANCE

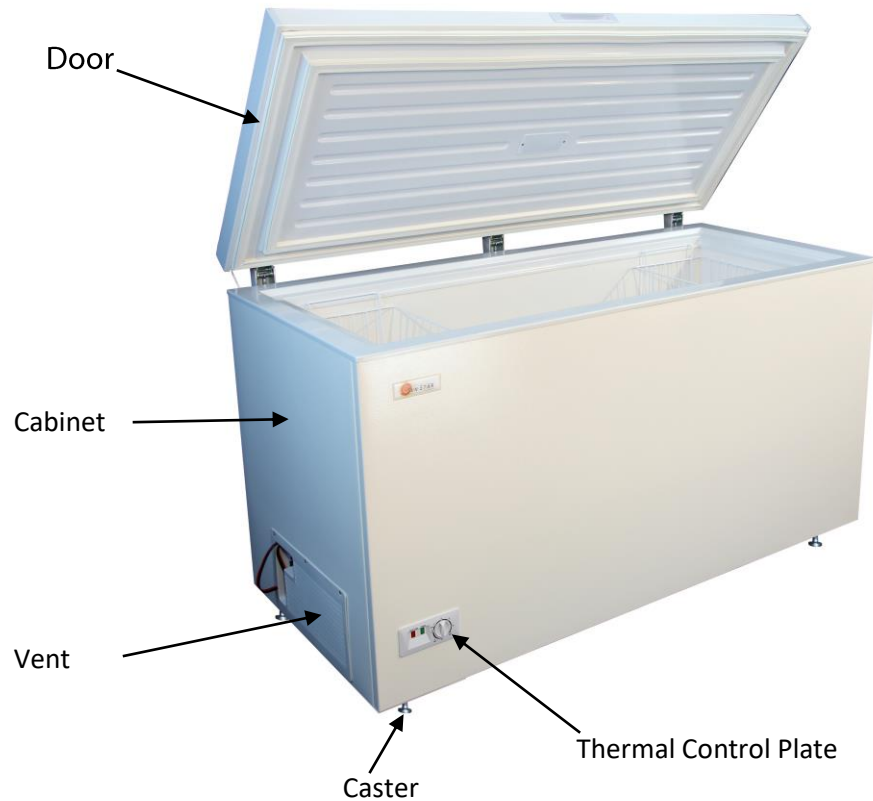

Fault	Cause	Solution
Faulty indicators and / or non operation of the compressor	<ol style="list-style-type: none"> <li>1. Loose contact</li> <li>2. Loose cables</li> </ol>	<ol style="list-style-type: none"> <li>1. Make it tight</li> <li>2. Make it tight</li> </ol>
The compressor is running abnormally or with unusual noise	The supply voltage is 85% lower than the rated value.	<ol style="list-style-type: none"> <li>1. Switch the unit off immediately until the recovery of the voltage supply is normal. A voltage regulator with an input power five (5) times larger is required if the voltage fluctuation exceeds that which is specified.</li> <li>2. Check the input voltage on the module and power supply battery if it is out of operating voltage.</li> <li>3. Check the cable length between the battery and module. Please refer to "Cable Requirements" on page 5 of the User Manual.</li> </ol>
The successive automatic shut-off of the compressor several minutes after start up	The supply voltage is 110% higher than the rated value.	
The storage temperature rises while the compressor is running properly	<ol style="list-style-type: none"> <li>1. Frequent opening of the doors.</li> <li>2. The cabinet is overloaded with tightly packed food.</li> <li>3. Too much frost accumulation.</li> <li>4. Door leakage.</li> <li>5. Gasket failure.</li> </ol>	<ol style="list-style-type: none"> <li>Try to open the doors less frequently.</li> <li>Arrange the food orderly with enough space for smooth air circulation.</li> <li>Take out frozen food and remove the frost.</li> <li>Adjust the door sealing.</li> </ol>
Abnormal noise in general is being produced	<ol style="list-style-type: none"> <li>1. The unit is not leveled</li> <li>2. Loose fastening parts</li> <li>3. Unwanted contact between pipes</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust the unit to a stable and leveled floor.</li> <li>2. Tighten the loose parts.</li> <li>3. Keep the parts away from each other.</li> </ol>

## GENERAL FAULTS & TROUBLE-SHOOTING

- 1) In case of an abnormal operation, please refer to the table shown on page 6 for inspection and possible solutions. If the faults cannot be solved, please contact the service department of our company or our local institutions with special engagement.

### The following are **NOT** results of faulty equipment:

- 1) The condenser in the corresponding internal wall will make the external condenser feel hot.
- 2) The intermitting noise heard in the cabinet during operation of the unit some time after shut-off is caused by the circulating flow of coolant in the condensing pipes.
- 3) The surface temperature of the compressor may rise to a range between 70°C/150°F and 90°C/194°F.
- 4) The condensed water beads on the external side of the unit or door during the rainy seasons will not affect the operation of the unit. The water beads may be wiped off with a dry cloth.

## MAJOR TECHNICAL PARAMETERS

### FORM 1

Product Model	Power	Available Capacity
ST-15CF	DC 12V/24V	425 L 15 cu. ft.

Working Temperature	Input Power (W)	Power Consumption (kwh/24hrs)
-15°C ~ -20°C 5°F ~ -5°F	90 watts	0.6

Refrigerant Type	Net Weight	Exterior Dimensions
R134A	77 kg 170 lb	W 162.5cm x D 78.7 cm x H 95.8 cm W 64 in x D 31 in x H 37.75 in

## TRANSPORT AND STORAGE

- 1) When loading and unloading the unit, the angle of the inclination should not be any more than 45 degrees while the unit is being moved. Keep the unit steady when in transit, especially when handling units with glass doors.
- 2) The unit should be placed in a well ventilated, dry, and cool place in order to avoid direct exposure to sunlight.
- 3) Remove the packaging material from inside and outside the unit before use. Arrange for the unit to be no less than six (6) inches from the wall at the back and side.
- 4) Place the unit on a sturdy and leveled floor.

## START UP & TEMPERATURE REGULATIONS

### 1) START UP

- a) Turn the control dial from off position to the desired number 1-7 (See Figure 4 on Page 4). The compressor will then start up and the unit will begin to refrigerate/freeze.
- b) Protection signal of the controller is a red indicating light. It will flash a number of times if fault occurs. Count the number of flashes and compare with the chart below:

Flash Number	Fault Occurring
1	Battery Protection Cut Out
2	Fan Over-Current Cut Out
3	Motor Start Error
4	Minimum Motor Speed Error
5	Thermal Cut Out of Module


(The module will run too hot if the unit system has been too heavily loaded or if the ambient temperature is higher than 46°C /115°F.)

- c) The unit will not run if there is a fault connecting the anode and the cathode of the voltage compressor.

### 2) TEMPERATURE REGULATIONS

The temperature will gradually drop when the control dial of the thermostat is turned clockwise (to the right) and will gradually gain when the knob is turned counter-clockwise (to the left). When the arrow on the control dial is pointed to the max position, the compressor will keep working. However, it is not recommended to use the unit for too long at such an extreme temperature.

FIGURE 4

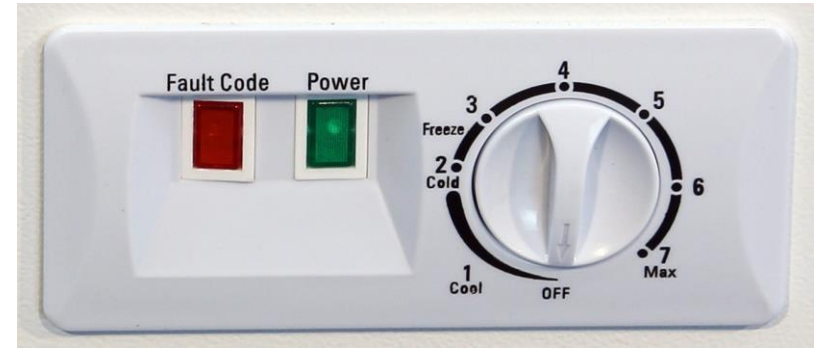

## CABLE REQUIREMENTS

To ensure the correct start and operating conditions for the unit, the following cable dimensions must be observed:

Wire Sizing Chart (Gauge)	Max . length between battery and compressor module (ft.)	
	12V/DC	24V/DC
# 8	20 ft	45
# 6	30 ft	85
# 4	45 ft	130

## SAFETY PRECAUTIONS

- 1) Use an independent 12V/24V DC outlet with a capacity of no less than 30A. A DC 12V/24V chest unit is not required to be grounded.
- 2) Disconnect the plug from the outlet if the unit is to be left unused for a long period of time. Check if the connection is okay before it is put into use again.
- 3) Do not immediately switch the freezer on and off – it will damage the compressor module. The normal time interval is five (5) minutes.
- 4) The compressor is only allowed to connect to a 12V/24V DC system. It is forbidden to connect the compressor directly with an AC power supply. It will damage the compressor and void the warranty.
- 5) The supplier is not responsible for any accidents or losses incurred from the unit.